



Spring Lock Unlocking Tools

Attention! the air conditioning system must be pressureless and free from refrigerant prior to unlocking spring lock connections.

Place the spring lock unlocking tool around the spring lock connection like a collar, so that the lip of the unlocking tool reaches behind the spring locking ring (A). Close the spring lock unlocking tool and push it in the direction of the spring locking ring (B). The spring lock connection can be undone in this position (C). Open the spring lock unlocking tool and remove it from the connection (D).