

HIGH-PRESSURE CLEANER

Technical Information for HDR 160 premium

***Caution! Before commissioning:**

- Unscrew the securing screw from the unit hood and remove the unit hood.
Cut off ventilation nipple of the oil tank cover.
- The oil level indicator must be checked with the unit standing in an upright position. The oil level should generally lie between the two marks on the oil tank.
- Reattach the unit hood.



Additional articles:

Fig.	Designation	Features	Art. No.	P. Qty.
8	Quick-Release Coupling with 1/2", 5/8" and 3/4" universal hose connection	Quick connection to common water hoses	0701 160 007	1
9	Professional Water Hose	Highly flexible, kink-proof and resistant to cold and heat	0886 001 2..	30/25/50 m
10	Pluggable wash brush	For universal use in surface cleaning	0701 160 008	1
11	Surface cleaner	Spray water-protected cleaning, inside and outside	0701 160 009	1
12	Hose Extension Adapter Art. No. 0701 160 011 required	Rubber, NW 8, 315 bar, 155°C, Length 10 m	0701 160 010	1
13	Adapter for extension hose	Double connector with 2x male thread in 1/2", brass	0701 160 011	1
14	Foam gun	For using foaming cleaners	0891 370	1
-	BMF Cleaner	Environmentally-friendly cleaner for production shops, machines and vehicles	0893 118 .	1
-	R1 Universal Cleaner	Universal, environmentally-friendly cleaner	0893 125 ...	1
-	Truck Wash	Universal cleaner for utility vehicle cleaning	0893 038 020	1
15	Foam Unit	For using Active Foam New and Extra Strong	0891 380	1
-	Active Foam New	For light to medium soiling	0893 044 ...	1
-	Active Foam Extra Strong	For medium to heavy soiling	0893 045 ...	1
16	Universal Triathlon Engine Oil SAE 15 W 40, 1 liter	For optimum lubrication	0897 115 401	1

