


## GLUE TAP

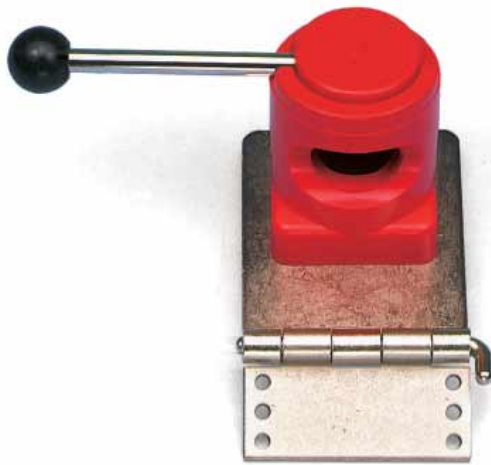

Lay glue bucket on its side. Pull out the spout and open the closure. Pull off the safety membranes. Screw on the glue tap and set up the glue container.



Screw on the hinged plate and the glue can be dispensed into the glue bottle or reservoir container of the glue roller after opening the lever.

- Easy to use and dose.
  - Thanks to the hinged plate, the glue tap can be firmly screwed onto the contact surface of the glue container. Offers the advantage that secure fixing is provided during dispensing. Glue remaining on bottom can also be dispensed by tipping the container without the glue container slipping off the table.
  - When changing the glue container, the hinge pin is pulled out so that the tap can be screwed onto the new glue container.
- The container with the mounted tap is now placed into the hinge plate and secured with the hinge pin.

**Art. No. 0891 183**

P. Qty. 1

**See overview table  
for technical data!**

### Additional articles:

**Adhesive Spatula**  
Art. No. 0891 185

**Adhesive Roller**  
Art. No. 0891 186

**Polyurethane Roller**  
Art. No. 0891 187

**Foam Roller**  
Art. No. 0891 188

**Inner Plastic Roller**  
Art. No. 0891 189

With this information, we want to advise you to the best of our knowledge based on our tests and experience. We assume no liability for the application results in individual cases, however, due to the large number of applications and the storage and application conditions that lie outside the scope of our influence. This also applies to the use of the non-binding

technical and commercial customer service we provide. We always recommend conducting your own tests. We guarantee the consistent quality of our products. We reserve the right to make technical changes and carry out further development.